


Thank you to use AC-M50.
Please read this manual thoroughly before operating the unit.

Names of Parts

 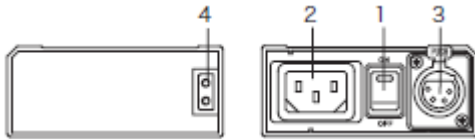


- (1) Power switch: Push the upper side, power turns ON and LED lights up.
Push the lower side, power turns OFF and LED goes off.
- (2) Power plug: Connect to AC power outlet.
- (3) Canon 4P connector: DC12V output (Total 50W with CamTap)
- (4) CamTap: DC12V output connector (Total 50W with 4P)

Operating Instructions


1. Connect AC plug to AC power outlet. Put Canon 4P cable into Canon 4P connector. Put CamTap cable into CamTap.

Put in the AC cable Put in the Canon 4P cable Put in the CamTap cable



2. Turn ON the power switch and confirm that the power LED lights up.

Power LED

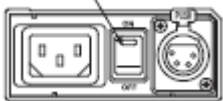


3. If the power LED does not light up, please confirm following;

- * Is the total power of the connected equipment over 50W?
- * Is there any short circuit and/or broken circuit?
- * Is AC power supplied?

After confirm the above matter, wait for a few minutes and turn ON the power again.

Dimensions

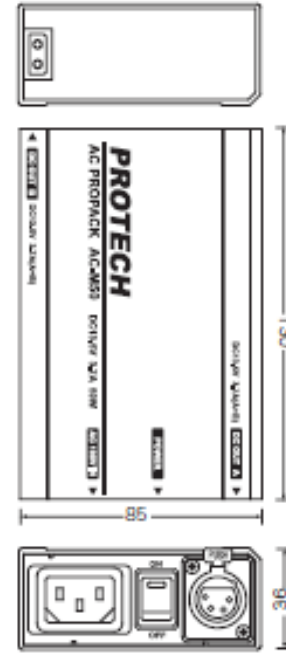

Specifications

- Input AC85V – 132V (50Hz / 60Hz)
- Output Canon 4P x1, CamTap x1
DC12V (Actual 13.5V) Less than 50W
- Weight: approx. 450g
- Outside dimensions: 85x36x130mm (WxHxD)
- Operation temperature: 0°C - 40°C
- Operating humidity: 20% - 80%