


Thank you to use ACPROPACK 100S.  
Please read this manual thoroughly before operating the unit.


## Names of Parts

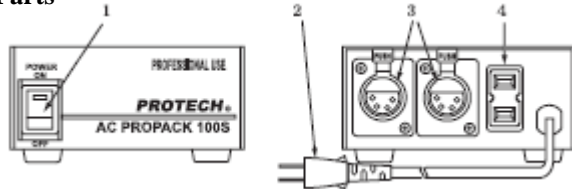


- (1) Power switch: Push the upper side, power turns ON and LED lights up.  
Push the lower side, power turns OFF and LED goes off.
- (2) Power plug: Connect to AC power outlet.
- (3) Canon 4P connector: DC12V output (Total 100W with 2 connectors)
- (4) Service outlet: It can be used up to 4.8A at AC100V.

## Operating Instructions

1. Connect AC plug to AC power outlet. Put Canon 4P cable into either Canon 4P connector.

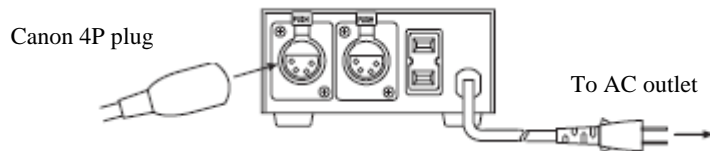


2. Turn ON the power switch and confirm that the power LED lights up.

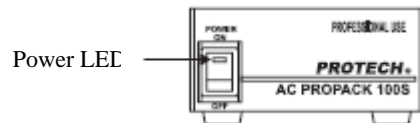

3. If the power LED does not light up, please confirm following;
  - \* Is the total power of the connected equipment over 100W?
  - \* Is there any short circuit and/or broken circuit?
  - \* Is AC power supplied?

After confirm the above matter, wait for a few minutes and turn ON the power again.

## Dimensions

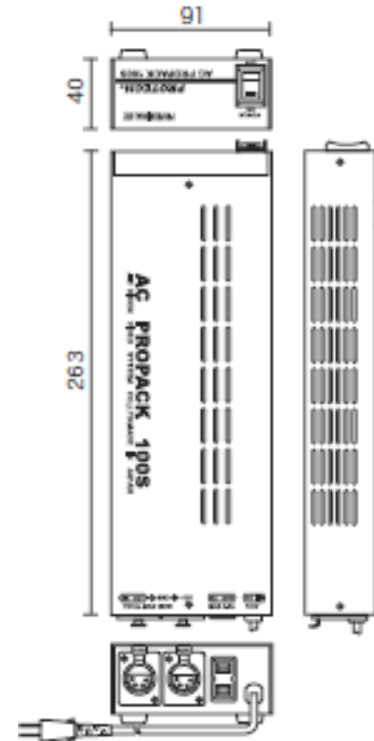

## Specifications

- Input AC85V – 265V (50Hz / 60Hz)
- Output Canon 4P x2  
DC12V (Actual 15V) Less than 100W
- Weight: approx. 800g
- Outside dimensions: 91x40x263mm (WxHxD)
- Operation temperature: 0°C - 40°C
- Operating humidity: 20% - 80%