

Specifications


HDP-1500/F

PROTECH®


主な仕様 Main specifications

Input part	Input	VIDEOIN BNC x1 (Composite) PC IN Dsub 15P x1 (when using HIF-500) PB IN BNC x1 (when using composite HIF-500)
Ourput part	Output	VIDEOIN BNC x1 (when using composite HIF-500) PC OUT Dsub 15P x1 (when using PC IN connecting HIF-500) MONITOR BNC x1 (when using composite HIF-500)
Function	Tally display LCD POW SW PB IN switch I/F connector	x1 x1 x1 (when using HIF-500) x1 (for Tally input, HIF-500 I/F)
Power supply	DC input	Canon 4P male x1, DC11-17V, approx.2.15A
	Power consumption	approx. 26W
General	Operation temperature	0°C - 40°C
	Storage temperature	-20°C - 50°C
	Weight	Main unit 7.4kg, Slide unit 2kg
	Dimension	Main unit 360x110x380mm (WxHxD) Slide unit 140x105x428mm (WxHxD)
Accessory	Operation manual	

System composition

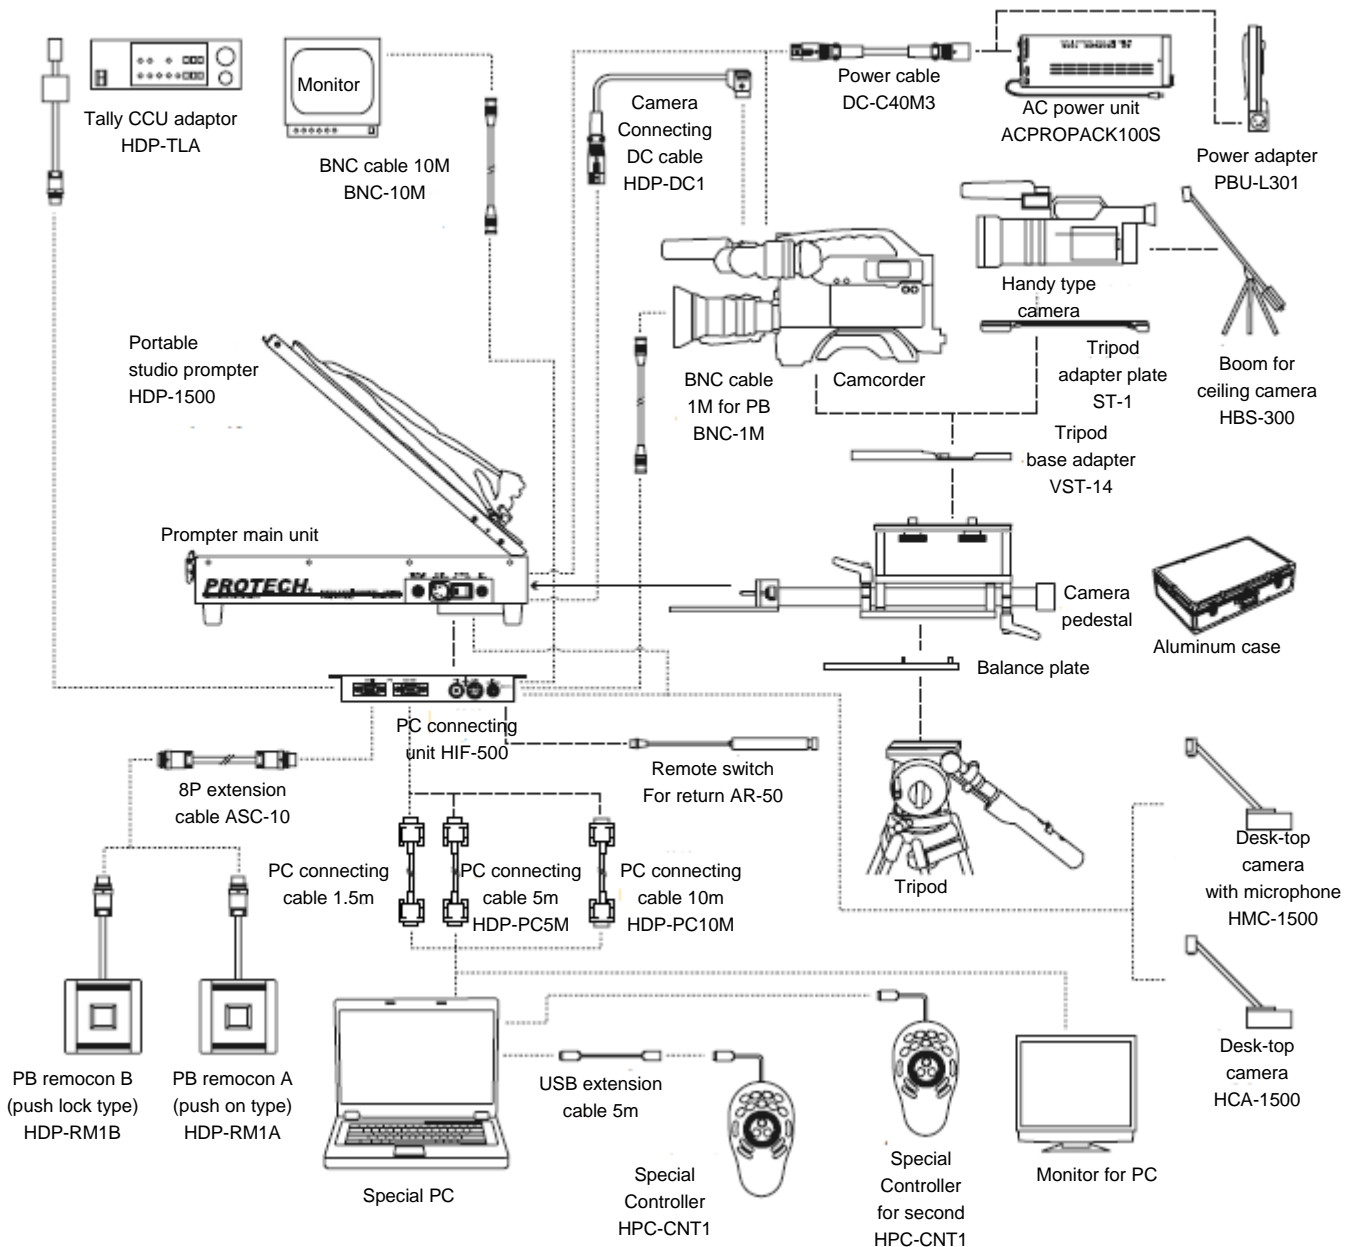

Explanation of the screen

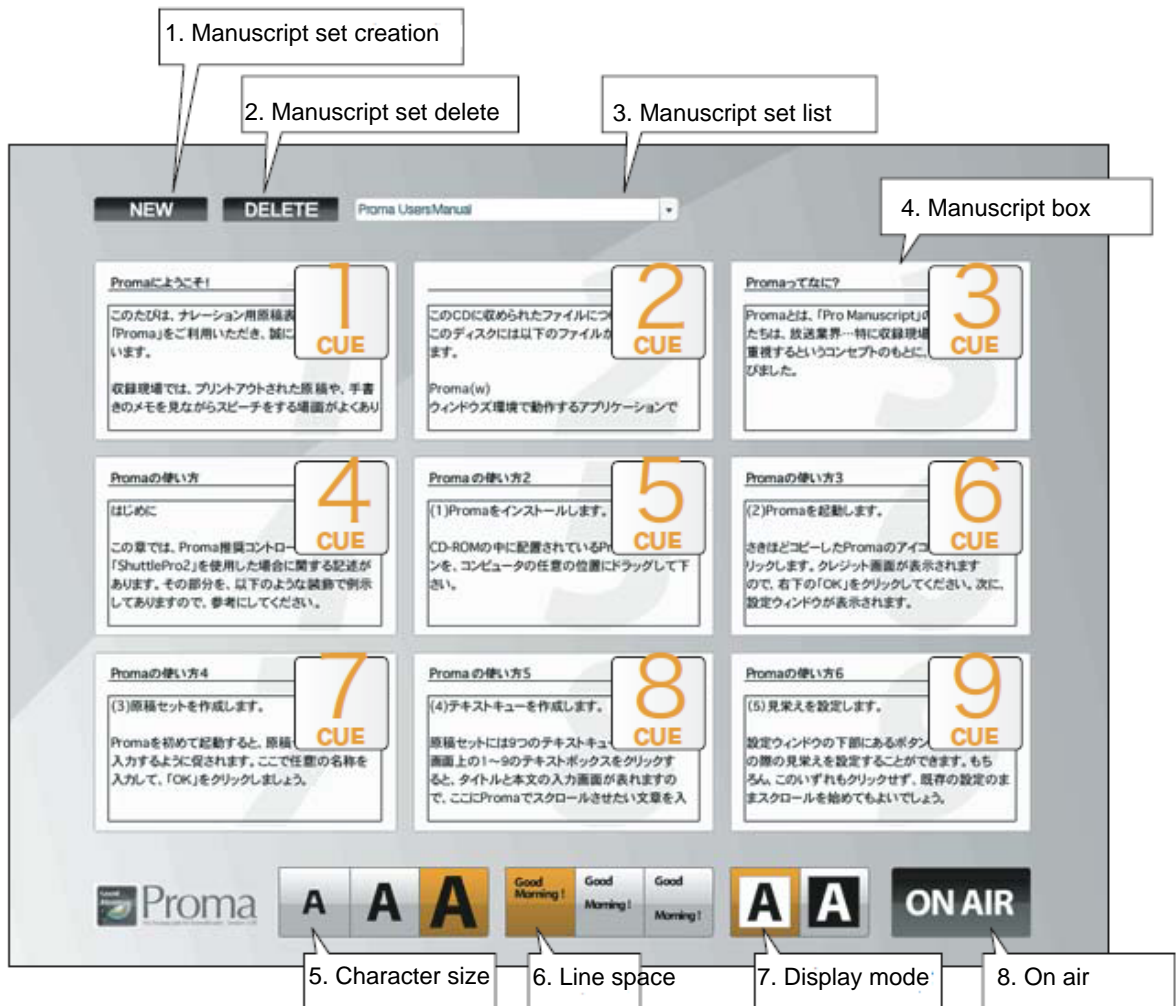

1. Manuscript set creation: Create manuscript set newly.
2. Manuscript set delete: Delete displayed manuscript set .
3. Manuscript set list: List of the stored manuscript set.
4. Manuscript box: Storing box of manuscript
5. Character size: The character size can be set to 3 steps.
6. Line space: The line space can be set to 3 steps.
7. Display mode: Back-ground and color of character can be set to 2 pattern.
8. On air: move to the execution window.

Open an execution window.


Confirm if the mode is set to direct input mode before operation.


Click the ON AIR button which is in the lower right in the setting window.

Execution window is displayed with full screen and the text written by setting window is displayed.

(ON AIR button is set to display No.1 manuscript box.)

Each manuscript box can be summoned by [1] – [9] of key board.

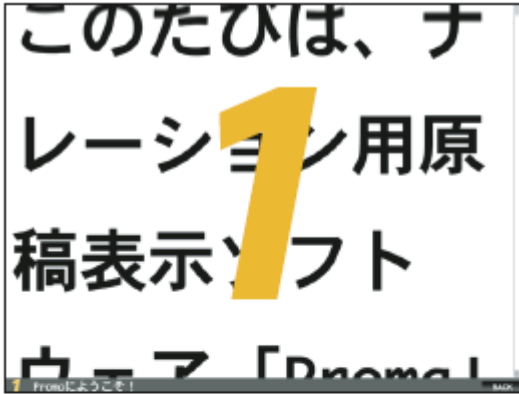

 Push this key, No. manuscript box is summoned.



A manuscript box is allocated for each key.

* When switching a manuscript box, a box number is roughly displayed in a few seconds at the center of the screen..

Scroll

When pressing [T,Y,U] of the key board, a text is scrolled for the top.


When pressing R, the scroll stands still.

When pressing [Q,W,E], it is scrolled in the opposite direction.




Scrolled for the bottom
(Opposite reading).

Scrolled for the top.
(Order reading)

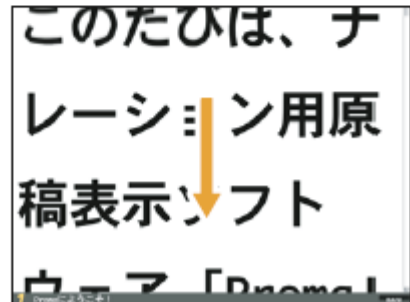

Controller

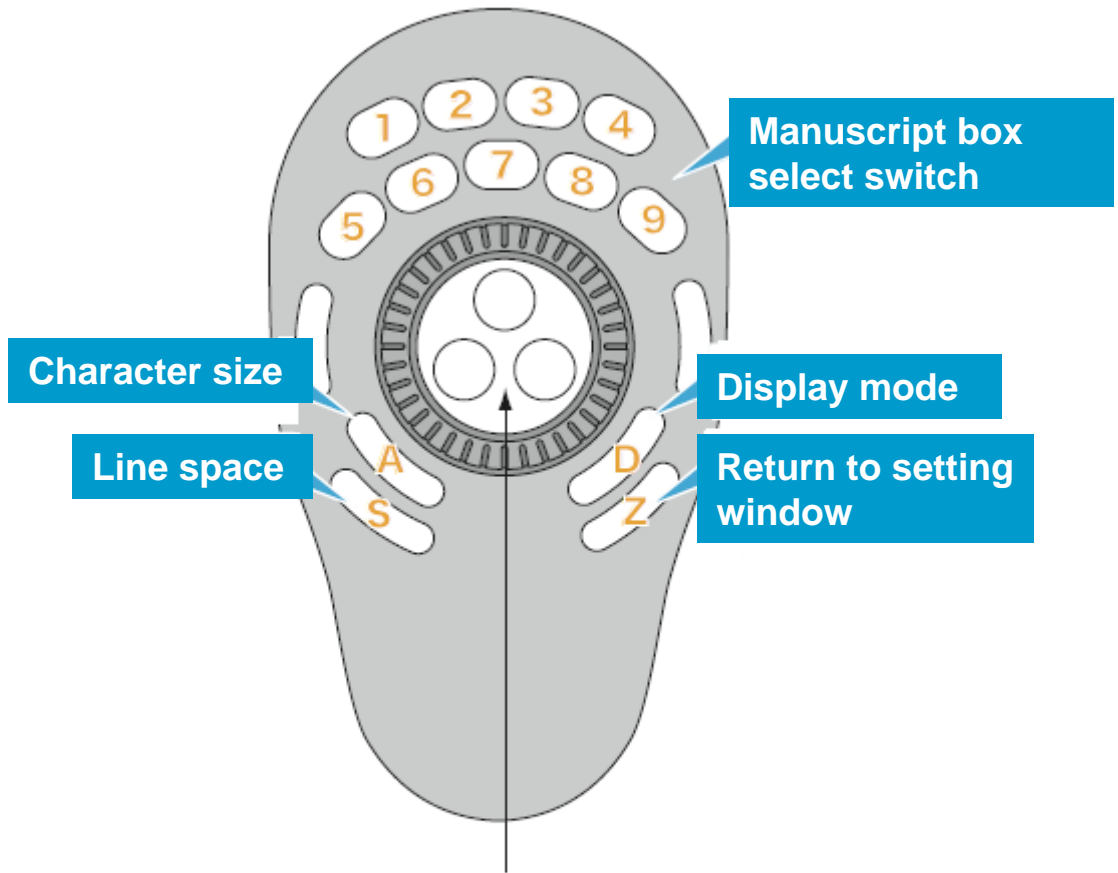

Jog & Shuttle



When turning to the left, it is scrolled in the opposite direction.

When turning to the right, it is scrolled to the forward direction.



When turning to the left, one line returns.

When turning to the right, one line advances.

Outside view

